

Installation Instructions:

For use on FA20/24 and FB16/20/25 engines

Read instructions thoroughly prior to installation.

Step 1: Remove oil filter.




Step 2: Install adapter without base seal O-ring. Torque to 30 ft. lbs. using 1" Deep Socket.



Step 3: Establish port to be utilized for air valve.



Step 4: Remove adapter. Apply oil to hex plugs and install in two ports not utilized. (If using sealing tape, be sure tape is on treads only and not end of plug)

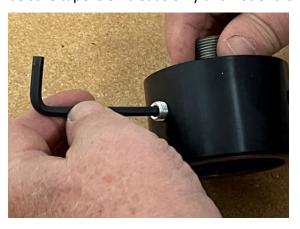

Subaru Oil Filter Anti-Drain Adapter SS-102-BK

Step 5: Install Viton O-ring and lubricate with oil. Torque to 30 ft. lbs. using 1" Deep Socket.



Step 6: Install Schrader valve.



Step 7: Install an appropriate size oil filter that contains M20x1.5 threads. Subaru oil filters will fit this adapter. **Caution:** Make certain that filter/adapter height will not contact hood when closed.

Step 8: Install caution sicker if oil/filter change will be serviced by an oil service technician.





<u>Prior to servicing for oil and filter change</u>, remove oil filler cap and apply min 30/max 100 psi compressed air with air chuck for 2 seconds, this will evacuate oil filter for easy and clean oil filter removal.