

Subaru Oil Filter Anti-Drain Adapter SS-101-BK



Installation Instructions:

For use on FA20 and FB20 Engines w/o factory oil cooler.

Step 1: Remove oil filter.



Step 2: Install adapter without base seal O-ring.
Torque to 30 ft.lbs. using 1 ¼" Deep Socket.



Step 3: Establish port to be utilized for air valve.



Step 4: Remove adapter.
Install hex plugs in two ports not utilized.



Subaru Oil Filter Anti-Drain Adapter SS-101-BK

Step 5: Install Viton O-ring and lubricate with oil. Torque to 30 ft.lbs. using 1 ¼" Deep Socket.



Step 6: Install air valve.



Step 7: Install appropriate size oil filter that contains M22x1.5 threads.



Prior to servicing for oil and filter change, apply compressed air with air chuck for 3 seconds, this will evacuate oil filter for easy and clean oil filter removal.